

## COMMERCIAL FITNESS

# desmo elite

## I GET MORE QUALITY TIME WITH YOUR MEMBERS

### THE MOST ENGAGING COMMERCIAL FITNESS TREADMILL

You want the best for obvious reasons. Your members will keep returning to this treadmill. The Desmo Elite is not only the most comfortable treadmill on the market, it is also the most engaging. The Desmo Elite is built to outlast and outperform all others, it can take an all day beat down and keep asking for more.

### COMFORT FOR YOUR MEMBERS


There are conventional treadmills and then there are Slat Belt treadmills by WOODWAY USA. Our patented running surface is unlike any other. Your members will rave about how great it feels to run on the rubberized slats, their joints and connective tissues will also take notice. What they will not notice is noise. The Desmo Elite is near silent, they can carry on a conversation with their neighbor or turn down the headphones a notch.

The Desmo Elite treadmill does not have a hood, that means users can utilize the entire running surface, another advantage to the slat-belt design.

### KEEP YOUR MEMBERS ENGAGED

Engage, connect and entertain members with a 17" fully embedded touch screen. The Elite platform puts everything from treadmill operation, custom programs and a personalized media platform at users fingertips. There has never been a treadmill that brings so much to the table.

On Demand TV, On Demand Music Videos, Personalized Playlists, Online Workout Tracking and Cable TV will keep them coming back to the Desmo Elite time after time. The Netpulse media platform is regularly updated so users will not grow bored with the same old same old.

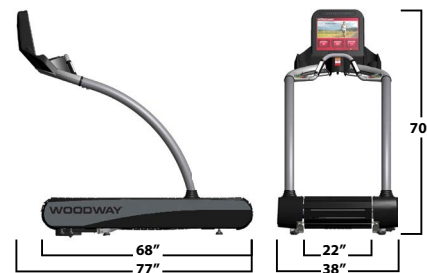

### LOWER OVERALL COSTS

The slat belt running surface lasts up to 150,000 miles without a single belt change or deck swap. It was designed to make up for conventional treadmills shortcomings, most notably wear and friction. The rubberized slats are built like a tank, literally. With 114 ball bearings the belt glides, which results in years of life with very little maintenance and up to 50% in electrical savings. There is no need to adjust and tension the belt, our design utilizes tracking rollers and a toothed pulley.

The result, the lowest maintenance and lowest total cost of ownership of any treadmill, so you can worry about more important things, like your members.

## DESMO ELITE


### ON DEMAND ENTERTAINMENT

Control your workout entertainment experience.

- On Demand TV - The most popular shows on the air right now
- Classic TV - Family Ties, Beverly Hills 90210, Star Trek & more
- Music Video Channels - Videos by genre or artist
- Movie Trailers - Previews for movies premiering this month

### PERSONALIZED PLAYLISTS

Create playlists quickly & easily from any piece of Netpulse compatible equipment at the club, or set up & edit a playlist from any computer with the internet.

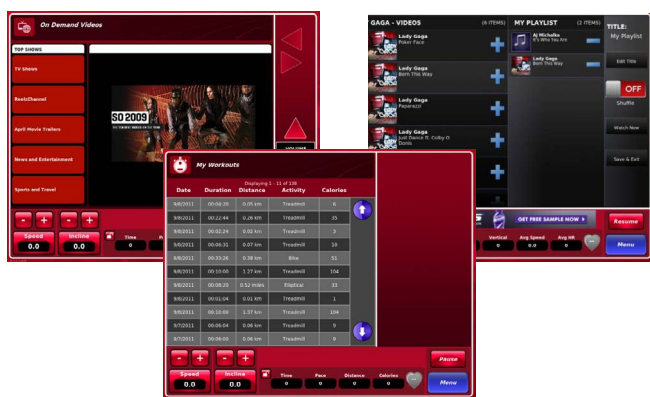

### ONLINE WORKOUT TRACKING

Workout tracking and access to workout history from any Netpulse compatible screen in the club or from any computer with internet by visiting the My Netpulse website: <http://my.netpulse.com>

- Monitor your fitness progress from the club or at home
- Add workouts completed outside of the gym
- View key workout stats by day, week, month and year

### EFFECTIVE EQUIPMENT MANAGEMENT

Through your personalized club dashboard you can view data by single or multiple locations and even by individual machine. Find out which equipment gets the most use, for how long and how many times per day, and use that data to extend the life of each piece.

- View and download reports on number of workouts, average workout duration and total workout hours
- Use the data on usage to determine the popularity of machines
- Download all reports to Excel

Learn more about getting connected to Netpulse, please visit this web page for more details [www.netpulse.com](http://www.netpulse.com)

● Standard Feature ○ Optional Feature

USER INTERFACE	
Coded/Non-Coded Polar Heart Rate Pick-up	●
ANT+ Heart Rate Pick-up	●
Touch Grip Heart Rate Pick-up	●
LED Display Board	NA
Personal Trainer Display Board	NA
LCD TV	Embedded
Netpulse Compatible™	Embedded
Netpulse Media Gateway	○
Embedded Touch Screen	●
iPod Compatibility	●
USB Power Source	●
Wireless Internet	○
CSAFE/FitLinxx	NA
Wireless Remote	NA
RS-232 Serial Port Interface	NA
PT Pro Software Package (Includes RS 232 Interface)	NA

PERFORMANCE SPECIFICATIONS	
0-15% Incline	●
0-25% Incline	○
(-3%) - (+22%) Incline	NA
0-11 MPH (0-18 km/h)	NA
0-12.5 MPH (0-20 km/h)	●
0-15 MPH (0-24 km/h)	○
0-16.5 MPH (0-26 km/h) (Requires 208V/230V)	NA
0-18 MPH (0-29 km/h) (Requires 208V/230V)	NA
115 Vac 20 Amp	●
208/230 Vac 20 Amp	NA
Medical Package (Hospital grade circuitry, reverse & 4 year parts warranty)	NA
Reverse (0-5 mph)	NA

PHYSICAL SPECIFICATIONS	
Running Surface Dimensions	22" W x 68" L (55 x 173 cm)
User Weight Capacity	Run: 400 lb. / Walk: 800 lb. (4 mph max)
Belt Type	60 Individual Slats
Drive System	114 Precision Ball Bearings with 12 Roller Guides (4 mm lateral tolerance)
Running Surface	Vulcanized Rubber (38-43 shore hardness)
Drive Motor	2 hp Continuous (5 hp peak) Brushless Servo
Unit Weight	445 lb. (Shipping Weight 533 lb.)
Width	38" (97 cm)
Length	77" (196 cm)
Height	70" (178 cm)
Power Supply	115 Vac 20 Amp Power Supply (Dedicated Circuit & NEMA 5-20R Outlet Receptacle Required)
Slate Gray Handrails	●
Efficient AC Brushless Servo Motor	●

**Warranty:** 5 year drive, motor & belt  
3 year all components  
1 year labor

**TO LEARN MORE, VISIT [WWW.WOODWAY.COM](http://WWW.WOODWAY.COM) OR CALL 800.WOODWAY TO TALK TO A REPRESENTATIVE.**